


## FLASHRIGHT© Surround Panel Replacement Instructions

- 1) Remove the old Surround Panel from the Display.
- 2) Separate the Hook & Loop Strips on the back of the NEW Surround Panel (if applicable).

**Make sure the Hook & Loop Strips are separated. Do not just remove the adhesive covers on the Hook & Loop and place the sticky part directly on the existing Hook Strips that are on the Display surround bracket.**

**If the Hook Strips are in bad condition replace them.**

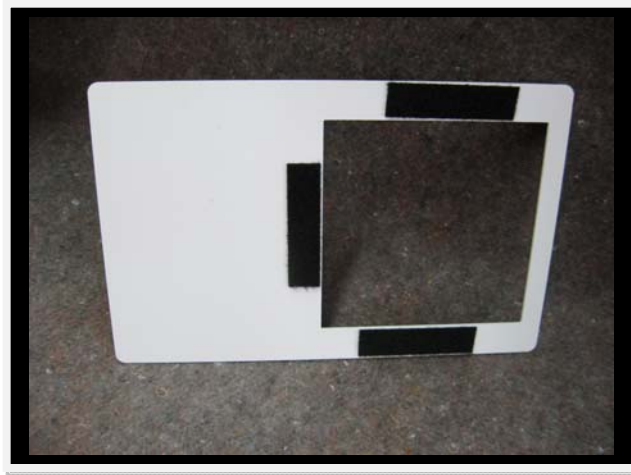

- 3) Slide the NEW Surround Panel over the Display and push against the areas where the Hook & Loop Strips are aligned. (Top, Bottom and Side)

